

Invisible Fence® Brand Power Cap® Battery Replacement Instructions

At Start-Up

Color	Indicator	Status
GREEN	5 flashes	Battery strength is good
RED	4 flashes	Battery strength is weakening; replace Power Cap® at first opportunity
NO LIGHT		Battery is dead; replace Power Cap immediately

Should the red LED flash continuously while your pet is wearing the MicroLite® Computer Collar®, the Power Cap strength is dangerously low; **replace Power Cap immediately.**



Replace your existing Power Cap with one supplied via your Power Cap plan. If a fresh Power Cap is not available, contact your Invisible Fence® Brand Dealer for a replacement. Once a replacement Power Cap is installed, and has been checked at the signal field, put the MicroLite Computer Collar on your pet. The Invisible Fence Brand pet containment system is now ready.

Changing the Power Cap

1. Use a small, thin coin to remove the Power Cap from the MicroLite Computer Collar. Insert the coin in the slot on top of the Power Cap and turn it 45 degrees counter-clockwise. Do not push down while turning. The Power Cap will rotate while the spring inside will push the Power Cap out of the MicroLite Computer Collar's battery chamber.
2. Install a new Power Cap using the following steps:
 - a. Line up the lugs on the bottom of the Power Cap with the grooves in the sides of the MicroLite Computer Collar's battery chamber. Make sure the metal tabs on the bottom of the Power Cap are not bent.
 - b. Place the Power Cap into the chamber while gently, but firmly, turning it clockwise 45 degrees with your fingers.
 - c. Use a small, thin coin in the slot on top of the Power Cap to turn it clockwise until the slot on the top of the Power Cap is lined up with the two small raised tabs on the bottom of the MicroLite Computer Collar. Do not over-tighten by turning the slot past the tabs on MicroLite Computer Collar.

On average, the Power Cap should be changed every 3 months. Low temperatures, the number of times the pet challenges the pet containment system boundary, and improper collar fit can all reduce Power Cap life.

⚠ WARNING *The use of any power source other than an Invisible Fence Brand Power Cap may cause a receiver to operate erratically or fail. The use of unnecessary force may damage the case and render the Power Cap inoperable. NEVER open a Power Cap, dispose of it in a fire, recharge it, expose it to heat above 212°F (100°C), or expose its contents to water. Doing so can cause leakage or explosion and may lead to personal injury.*

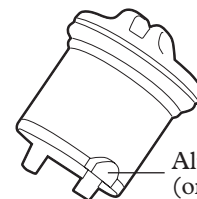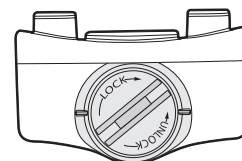

Alignment Lug
(one on each side)

